

Symphony[®]

1327H – 7inch 1/32GB

1329H – 9inch 1/32GB

4649H – 9inch 4/64GB



ANDROID UNIVERSAL MULTIMEDIA

15.3	Before starting Android Auto.....	15
16.	Apple CarPlay.....	16
16.1	About Apple CarPlay.....	16
16.2	What you need?	17
16.3	Before starting Apple CarPlay.....	17
17.	Car Settings function operation.....	18
17.1	Audio Settings	18
17.2	sound field settings.....	18
17.3	Basic Settings	18
17.4	backlight settings.....	19
17.5	Radio.....	19
17.6	default.....	19
17.7	Original.....	19
17.8	Voice Settings.....	19
17.9	factory setting.....	20
18.	CAMERA functional operation.....	20
19.	Troubleshooting functional.....	20
	Common Troubleshooting Guide.....	20

1. How to read this manual

1.1. How to read this manual

This manual uses illustrations way to illustrate the steps and precautions. Photos of this manual is only for reference, please prevail in kind. Tag

1.  Important Precautions mark, should be read carefully in order to prevent the occurrence of life, injury and other accidents.

2.  Special instructions, supplementary explanation, the Prophet and the reference mark.

3.  Additional information tags, assist the machine operator.

Tips: When the instructions say and physical description of the function is not the same, the actual functionality prevail.

CONTENTS

1.	How to read this manual	4
1.1.	How to read this manual	4
1.2.	Warning	5
2.	Main interface	5
2.1.	Enable disable host.....	5
2.2.	Power.....	5
2.3.	Off.....	5
2.4.	main interface	5
3.	Video Function Operation	6
4.	 Warning.....	6
5.	Boot Logo functional operation	7
6.	wallpaper functional operation.....	8
7.	cleaning equipment.....	8
8.	radio operation	9
8.1.	radio operation.....	9
8.2.	Band switching	9
8.3.	fine-tune search.....	9
8.4.	automatic search storage radio stations	9
9.	Dynamic wallpaper function.....	10
10.	Panel Key Functions.....	10
11.	Music functional operation	11
12.	Figure quick browsing operation	12
13.	SET FUNCTION OPERATION	12
13.1	SET FUNCTION OPERATION.....	11
13.2	Language input	13
13.3	Date and time settings.....	13
13.4	version number information	14
14.	Optional feature operation	14
14.1	AUX function operation (optional)	14
14.2	ES File Browser function operation	14
14.3	Toolbox function operation (optional).....	14
14.4	function Operating Instructions	14
15.	Android Auto.....	15
15.1	About Android Auto	15
15.2	What you need?	15

icon position.


- ② In other function interface, touch interface  icon directly return to the previous screen.
- ③ In other function interface, touch interface  icon directly return to the main screen.
- ④ daemon icon, touch  icon to see recently opened and run in the background.
- ⑤ in the main interface touch  icon to enter **【all applications】** interface.
- ⑥ with your finger in the upper right area of the main interface to decline, can quickly open the Settings Car Settings Feedback cleanup Closed luminance sound function setting interface.
- ⑦ in the main interface touch **【off-screen】** icon, you can turn off the screen, touch to open freely.

3. Video Function Operation

This function can play USB, built-in hard disk connected to the device video file.

- ① Product Support video file formats including MPEG, MPG, MP4,3GP, MKV, AVI, FLV and so on.
- ② does not support video playback, because the format is not supported and can not be played.
- ③ in the **【main interface】** touch **【video】** icon to enter the following interface:
as shown below:

during video playback, slide up and down the left hand area to adjust screen brightness, adjust the volume to the right area.

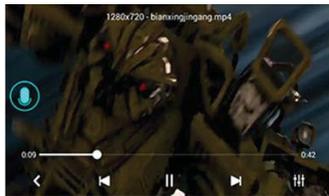

4. Warning

To ensure that you and your car and personal safety of others, please be sure to do the following basic requirements:

1.2. Warning

To ensure that you and your car and personal safety of others, please be sure to do the following basic requirements:

- ① Before using this unit, please read all instructions carefully. Follow the instructions as if caused by the machine along the sea, it will void the warranty.
- ② to ensure traffic safety and to avoid violation of traffic regulations, do not watch the program and operate the unit while driving.
- ③ To avoid short circuit, do not allow the unit in contact with rainwater.
- ④ To prevent a short circuit, do not prevent or leave any metallic objects (such as coins or metal tools) inside the device.
- ⑤ Click here for manual use the machine, the machine can not open their own repairs, for repair, please professional repair station maintenance.
- ⑥ when the engine is turned off, do not use the car stereo for a long time, otherwise it will run out of battery power.
- ⑦ Never insert objects into the ventilation slots or other openings of the device.
- ⑧ Do not use sharp objects come into contact, rub or strike the screen.

2. Main interface

2.1. Enable disable host

2.2. Power , When the ignition switch is in the ACC ON position, press the switch panel on the touchscreen  key to boot.

2.3. Off

after the host starts, press the switch on the side of the touch screen  button for 2 seconds, the host will perform the shutdown.

2.4. main interface

in the boot mode, the system defaults to enter the radio interface, touch  icon to enter the main interface:

- ① fingers gently sliding around the screen to switch the main community page, press and hold an icon to move the



6. Wallpaper functional operation

in the **【main interface】** touch **【wallpaper】** icon to enter the following interface, you can select your favorite wallpaper in the background and drag the wallpaper can browse, then press **【Set wallpaper】** icon set success.



7. Cleaning equipment

If the surface of the device has a stain, use a clean, soft cloth to remove spots, such as cleaning cloth.


If the panel is very powerful dirty, wipe with a mild detergent dirt, then use a clean, soft cloth to wipe off the cleaner.

⚠ mechanical parts cleaning spray may affect the device directly on the device. Hard cloth or using a volatile liquid (such as thinner or alcohol) to wipe the surface this may scratch the surface or erase character.

- ① Before using this unit, please read all instructions carefully. Follow the instructions as if caused by the machine along the sea, it will void the warranty.
- ② to ensure traffic safety and to avoid violation of traffic regulations, do not watch the program and operate the unit while driving.
- ③ To avoid short circuit, do not allow the unit in contact with rainwater.
- ④ To prevent a short circuit, do not prevent or leave any metallic objects (such as coins or metal tools) inside the device.
- ⑤ Click here for manual use the machine, the machine can not open their own repairs, for repair, please professional repair station maintenance.
- ⑥ when the engine is turned off, do not use the car stereo for a long time, otherwise it will run out of battery power.
- ⑦ Never insert objects into the ventilation slots or other openings of the device.
- ⑧ Do not use sharp objects come into contact, rub or strike the screen.

5. Boot Logo functional operation

in **【all applications】** interface touch **【Start Logo】** icon to enter the power setting interface Logo: Click below the screen (set the boot Logo) button to enter the Boot Logo setting.

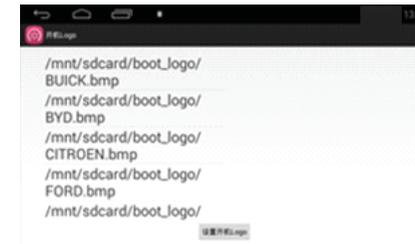

Note: Only the full screen size of BMP files can set the boot Logo, the number of colors and BMP color depth of 32 before they can, BMP files need to be placed in an external storage device boot_logo directory below.

reboot operation (optional)


touch **【all applications】** interface **【Restart】** icon to enter reboot the system interface: Touch OK to restart the system; reboot the system without touching the Cancel icon.

AM2 each 6)

②search, search again after the search will stop automatically.

9. Dynamic wallpaper function

in **【all applications】** interface touch **【Live Wallpaper】** icon to enter the following interface, choose your favorite live wallpaper, drag up and down to browse, then press **【Set wallpaper】** icon set Set success.

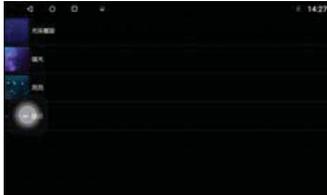

10. Panel Key Functions

Please refer to the physical panels, inquiries about the corresponding key introduction. (Part Function Keys If deviation, please prevail in kind)

1. (switch Mute)

In the absence of state power, short press to start the host.

①with panel **【】** key case, according to this side of **【】** key is no mute function in the boot state, long

press the side of the **【】** key is off the host, press the panel **【】** key to switch to silent mode.

②no panel **【】** down key scene in the boot mode, press the panel **【】** key to switch to silent mode,

press **【】** key to turn off the host.

2. (main menu)

In any application, press to return to the main screen.

8. Radio operation

8.1. Radio operation

in the **【main interface】** touch **【Radio】** icon to enter the radio interface:



8.2. Band switching

Touch **【BAND】** icon to switch between FM1 FM2 FM3 AM1 AM2.

8.3. fine-tune search

press **【】** and **【】** icon trimming point by point, long press the manual search, when the search to the radio will automatically stop.

8.4. automatic search storage radio stations

①Long press **【】** again icon to automatically enter the search state to search stations automatically stored.

Touch the search process **【】** icon to terminate the automatic search for a station.

 ①FM band can store 18 radio stations (FM1 FM2 FM3 each 6), AM band can store 12 radio stations (AM1

12. Figure quick browsing operation

This function can be USB, internal hard disk connected to your device for viewing image editing.

- ①The product supports image file formats including JPG, PNG, BMP, JPEG and the like.
- ②Unsupported image format player, because the format is not supported and can not be played.
- ③in **【all applications】** interface touch **【Express plans】** icon to enter the following interface:



④touch the top of the  icon to select the album activities and other options.

⑤Touch  icon to set the lamination Grid List file browsing albums effects.

⑥Touch  icon to set the sort Add show hidden items and other options.

Note:

1, touch  icon, click **【Settings】** - **【General】** - Select **【contains video files】**, you can play video files; when there is no check on **【contains video files】**, video files, unable to display.

2, part of the picture can not edit text Rotate Left or Rotate Right, so it will not display this function icons.

13. SET FUNCTION OPERATION

13.1 SET FUNCTION OPERATION

in **【all applications】** interface touch **【Settings】** icon to enter the following interface:

3.  (Back key)

In any application, press to return to the previous menu.

4.  (volume up)

In any mode, press the volume up.

5.  (volume reduction)

In any mode, press volume down.


11. Music functional operation

①This function can play USB, built-in hard disk connected device audio files.

②The product supports music file formats including MP3, M4A, WAV, AMR, WMA, OGG, AAC, MID and so on.

③does not support music playback, may be prompted to format does not support can not be played.

④in the **【main interface】** touch **【music】** icon to enter the following interface:

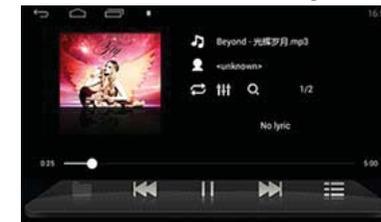

⑤Touch  and  icon to perform the song next song played.

⑥Touch  icon to switch between pause play.

⑦Touch  icon, scanning the list of songs.

□ Touch  icon to switch between open loop repeat a single in a repeat all random.

13.4. version number information

Settings page in touch (on vehicle computer) icon, you can view the Android version revision number.

14. Optional feature operation

14.1. AUX function operation (optional)

video input jack plug to connect the input video input, audio input plug to connect the input audio input jack.

14.2. ES File Browser function operation

in **【all applications】** interface touch **【ES File Explorer】** icon to enter the ES file browser interface.

Favorites: You can access news, weather, documents, videos, apps, music and other web via wifi

Local: ES will automatically navigate to the root directory of the storage.

USB file manager, a variety of file operations, multi-select multiple file view options and more powerful clipboard functions, search function.

Library: insert U disk, you can view pictures, music, video playback and other functions.

14.3. Toolbox function operation (optional)

in **【all applications】** interface touch **【Toolbox】** icon to enter the Toolbox interface.


Cache clear: clean up or remove your unwanted files:

① Touch a key clean-up icon to delete the memory unwanted junk files, view the next host the remaining space used space capacity.

- Click Apply icon in the icon drop-down video music files map Select Delete and radio delete.

14.4. Function Operating Instructions

in **【all applications】** touch **【specification】** icon to enter Manual operation interface, gently slide to the left to the right at the interface with your fingers, you can switch the next interface. (Note: there Describes some of the

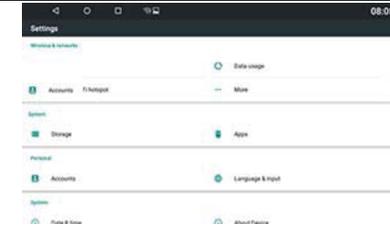

13.2. Language input


Settings page in touch **【Language input】** icon to enter the following interface:

- Language Settings page includes selecting a language, keyboard and input method settings.
- product interface language support for Chinese, traditional Chinese and English.
- Touch **【iFlyTek input method】** icon to the right, you can set the input settings, keyboard settings, set up voice, handwriting settings, restore the default settings, and other functions.



13.3. Date and time settings

set interface touch **【Date and Time】** icon to enter the following interface; you need to set the date, time, time zone, in the corresponding interface in touch **【completed】** icon to set Set success.

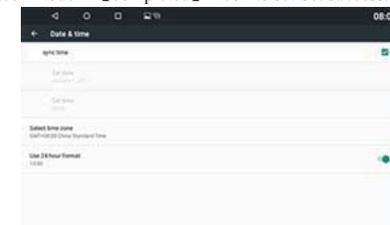



1. App launcher: To open app launcher, tap the app launcher button.
2. Multi-tasking widget: You can control ongoing content with this widget, while using another app.
3. Notification center: To see your recent calls, messages and alerts, tap the notification button.
4. Microphone: To talk to Google, tap the microphone

16. Apple CarPlay

16.1. About Apple CarPlay™

CarPlay puts key iPhone apps - the ones you want to use while driving - on your vehicle's built-in display. With CarPlay, you can get turn-by-turn directions, make phone calls, exchange text messages, listen to music, and more. Apple CarPlay is available on select automobiles navigation systems, and works with iPhone 5 or higher with iOS 7.1 or higher. You can operate CarPlay using your vehicle's built-in controls - a touchscreen, a rotary knob controller, or both. To learn how to operate your display, refer to the user guide that came with your vehicle. Or just use Siri voice control to tell CarPlay what you want. In fact, Siri often steps in automatically to help you, depending on the app you're using.

For more information & troubleshooting, refer to the iPhone manual or visit the Apple website

features the host operating instructions)

15. Android Auto™

15.1. About Android Auto™

Android Auto™ brings the most useful apps from your phone to your vehicle's screen, optimized for easy glancing and control while driving. You will be able to control things like navigation, maps, calls, text messages, and music, all from your vehicle's screen.

To learn about Android Auto™ and its features, visit the Android website at <http://www.android.com/auto/>

15.2. What you need?

- 15.2.1. An Android phone running Android 5.0 (Lollipop) or higher with a data plan.
- 15.2.2. A vehicle that's compatible with Android Auto™.
- 15.2.3. A genuine USB cable

15.3. Before starting Android Auto™

Installing the Android Auto™ Application

Install Android Auto™ Application into your mobile phone.

Setting the system

Before connecting your mobile phone, check whether Android Auto™ is set to be used in Setup > [Connectivity].

Starting mode

Connect your phone to your car using a USB cable > Press [MEDIA] > [Android Auto].

17. Car Settings function operation

Car Settings function operation

in the 【main interface】 Touch 【Car Settings】 icon to enter the following interface:



17.1. Audio Settings

drag the 【】 icon, can be arbitrarily adjust the treble midrange bass volume. Touch 【】 icon to switch to customize jazz classical rock and other volume effects. Touch 【】 icon to turn on off loudness. Touch 【Restore Default】 icon to restore the initial state.

17.2. sound field settings

Touch 【Left】 and 【Right】 icon, can be left and right to adjust the volume balance.
Touch 【before】 and 【after】 icon, can be up and down to adjust the volume balance.
Touch 【】 icon, you can quickly set up audio control center point.

17.3. Basic Settings

Touch 【Close Time Setting】 icon to set the off-screen time.

16.2. What you need?

- 16.2.1. An iPhone5 or higher.
- 16.2.2. A car that's compatible with iPhone.
- 16.2.3. A genuine USB cable from Apple

16.3. Before starting Apple CarPlay

Setting Siri on the iPhone

Siri must be enabled on your iPhone. If Siri is turned off, a notice will be displayed.

Go to Settings > Siri & Search > Turn on Siri.

Setting the system

Before connecting your mobile phone, check whether Apple CarPlay is set to be used in Setup > [Connectivity].

Starting mode

Connect your phone to your car using a USB cable. The CarPlay Home screen will be displayed automatically. When in a different mode, Press [MEDIA] > [Apple CarPlay].



1. App launcher: To open app launcher, tap the app launcher button.
2. Multi-tasking widget: You can control ongoing content with this widget, while using another app.
3. Notification center: To see your recent calls, messages and alerts, tap the notification button.
4. Microphone: To talk to Google, tap the microphone

17.9. factory setting

In the 【factory setting】 screen, touch 【Restore Factory】 icon, enter the password 1234 to enter. Touch Erase everything icon to restore the system to factory settings, the system will automatically restart. Third-party programs after the system is restored to factory settings, and all have been installed User data will be lost.

18. CAMERA functional operation

When the unit is connected to CAMERA video input, 【all applications】 interface touch 【CAMERA】 icon to enter the following interface:



①When the car engine is not connected with the equipment, in CAMERA screen shows no signal.

②When the device is connected with the car engine in the CAMERA screen displays load, the normal display front camera screen after loading.

Native CAMERA video input display function only, not with CAMERA serial communication control device functions.

19. Trouble shooting functional

Common Troubleshooting Guide

Fault 1: You can not boot

Touch  icon to set parking headlight detection key tone mute function reversing switch.

17.4. backlight settings

drag the  icon, the effect can be adjusted backlight settings.

17.5. Radio

choose your favorite country radio area.

17.6. default

drag the  icon to adjust the default volume.

17.7. Original

through the original steering wheel, the machine can also be controlled. Original car steering wheel control line positive electrode, a negative electrode and a positive electrode side of the machine control line, a negative electrode connected. One by one by pressing the steering wheel above Key, and records the order, click on the corresponding function settings to save settings.



17.8. Voice Settings

in the 【Voice Settings】 screen, slide this icon, you can control the voice switches.

الشركة العالمية

مراكز الخدمة المعتمدة

المهندسين

العنوان: ٣ شارع أحمد عرابي - المهندسين - الجيزة
تليفون: (٠٢) ٣٣٠٥١٨٠٩ - (٠٢) ٣٣٠٥١٨٩٥
موبايل: ٠١٠٠١٥٤٩٩٧١

مصر الجديدة

العنوان: ١٥٥ شارع الزهراء - سانت فاتيما - مصر الجديدة - القاهرة
تليفون: (٠٢) ٢٧٧٥١٣٩٢ - (٠٢) ٢٧٧٥١٣٩٨
موبايل: ٠١٠١٠٦٣٧٧٣٢

سموحة

العنوان: ٣٨ شارع مصطفى كامل - أمام نادي سموحة - الاسكندرية
تليفون: (٠٣) ٤٢٠٣٥٩٣ - (٠٣) ٤٢٠٣٥٩٤
موبايل: ٠١٠٣٣٧٤٦٣٥٦/٠١٢٠٧٨٣٤٩٩٣

سيدي بشر

العنوان: ٩ عمارات المحروسه طاييه سيدي بشر بجوار نفق المحروسه عاليه - الاسكندرية
تليفون: (٠٣) ٣٥٦٦٣٤٦ - (٠٣) ٣٥٦٦٣٤٣
موبايل: ٠١٥٥٥٣٢٥٦١١

Pioneer KENWOOD JVC Clarion ALPINE
Polaroid/foosqate BLAUPUNKT Symphony JBL Infinity

Made in Egypt
صنع في مصر

Cause: The power supply fuse burned

Solution: Replace the same type fuse

Fault 2: can not boot

Reason: Other factors contributing to the microprocessor is not working

Workaround: After 10S, host restarts

Fault 3: After the ignition switch is turned off, the settings are lost

Reason: replace the battery or fuse

Solution: Re-setting information and save the

Fault 4: poor income units

Reason: The radio signal is weak

Solution: The car is moved to another location search again

fault 5: No image

Reason: Other factors contributing to the microprocessor is not working

Workaround: After 10S, host restarts

Fault 6: driving the process can not view the image

Cause: driving the process is not allowed to view images

Solution: Plug the car to a safe location, the car stalls placed in the P range, pull handbrake